


# Camphorquinone FP 5060

#### General

Camphorquinone is a free flowing yellow-orange powder formulated for use as a photoinitiator in dental applications.

This high purity material absorbs UV radiation in the region of 200-300nm due to the  $\Pi$ - $\Pi$ \* transition and visible light (400-500nm) due to the n,  $\Pi$ \* transition of the a-dicarbonyl chromophore. Being a 1,2-dione, CQ photobleaches, producing excellent whites.

#### **Chemical structure:**

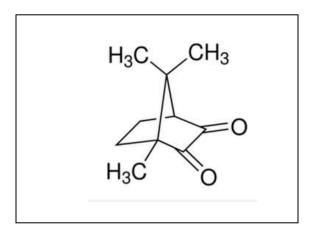

#### **Product information**

Phone: (203) 375-1137

PRODUCT TYPE: Photo initiator PRODUCT NAME: Camphorquinone

CAS NUMBER: 10373-78-1

TRADE NAMES: Camphorquinone, 2,3 Bornanedione

APPLICATIONS: Dental restoration

KEY FEATURES: High purity photobleaching photoinitiator.

PACKAGING: Sold as a solid

REGISTRATIONS: AICS, DSL, EINECS, TSCA

SHELF LIFE: 1 year when stored indoors at 25 (+/- 5) deg C

Fax: (203) 386-9754

Hampford Research, Inc. disclaims any liability incurred in connection with the use of the data contained in this bulletin. Furthermore, nothing contained in this bulletin shall be construed as a recommendation to use any product in conflict with existing patents.

Rev: 11/7/14


## **Typical specifications**

APPEARANCE: YELLOW-ORANGE POWDER

**PURITY:** 97.0% MINIMUM 198- 201°C (CAP) **MELTING POINT:** MATCH STANDARD IR:

**SOLUBILITY IN METHANOL: CLEAR TO SLIGHT YELLOW** 

### U V ABSORPTION SPECTRUM OF CAMPHORQUINONE 1% IN MEOH 6.536 -04 molar solution

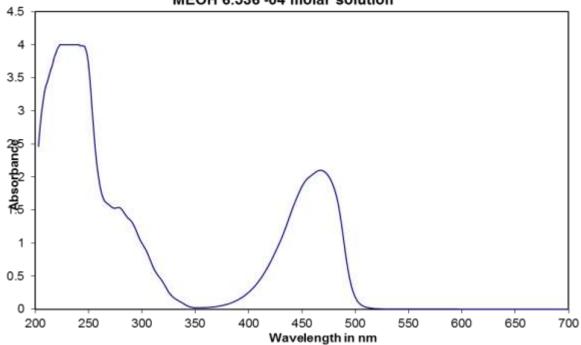

## Safety and Handling

Phone: (203) 375-1137

Bis 4-cumyl lodonium TetraPhenyl Borate should be handled in accordance with good industrial practice. Detailed information is provided in the SDS.

Hampford Research, Inc. disclaims any liability incurred in connection with the use of the data contained in this bulletin. Furthermore, nothing contained in this bulletin shall be construed as a recommendation to use any product in conflict with existing patents.

Fax: (203) 386-9754